

CAUTION!

Only tighten the connectors of the FLARM BOOSTER by hand. The connectors must not be loaded laterally!

CAUTION!

Be careful not to connect SMA Female and RP-SMA Male!

SMA

Male



Female



RP-SMA

Male



Female



FLARM® is a registered trademark of FLARM Technology Ltd., Hinterbergstrasse 15, CH-6330 Cham


jetvision GmbH
Am Rain 24
85256 Vierkirchen

Phone: +49 89 9545 991 20

www.jetvision.de
support@jetvision.de


FLARM BOOSTER

He Edition Installation Guide

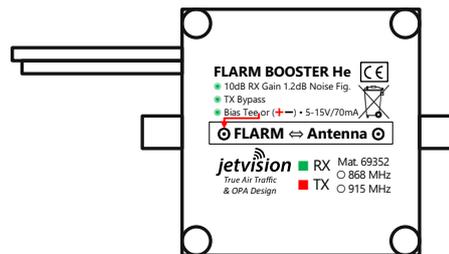


No nearby¹⁾ horizontal strong transmitters²⁾

FLARM BOOSTER with BIAS TEE

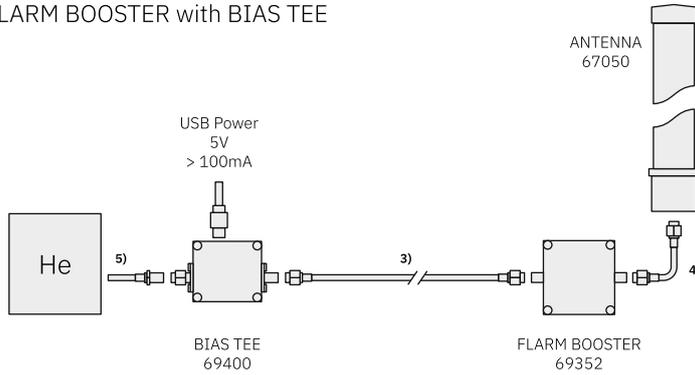


Nearby⁴⁾ horizontal strong transmitters²⁾


FLARM BOOSTER and CAVITY FILTER with BIAS TEE

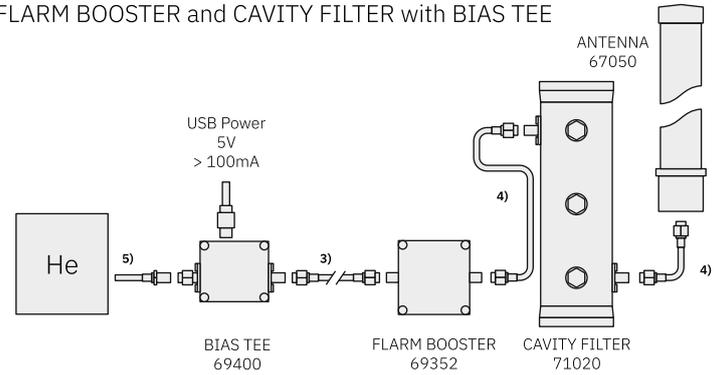

FLARM BOOSTER without BIAS TEE

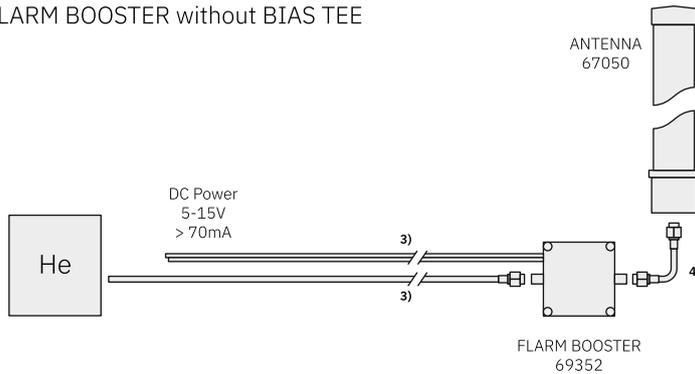

FLARM BOOSTER and CAVITY FILTER without BIAS TEE

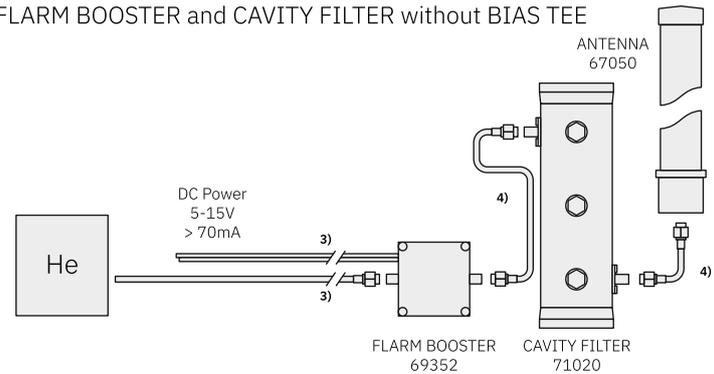

- ¹⁾ < 200m
- ²⁾ LTE, GSM, Radio, TV
- ³⁾ < 50m, Attenuation less than 10dB, 5m-20m Mat. No. 70100

- ⁴⁾ < 0,5m, as short as possible, Mat. No. 70151
- ⁵⁾ Mat. No. 70251 or 72751 depending on He miner connector type